


# Digital Sensor Input

**DK 7320.580**

## Note:

For reasons of clarity of the presentation, these operating instructions do not contain all information details and also cannot cover every possible case of installation, operation or repair. Technical specifications are subject to change without notice. In case of doubt, the German text prevails.

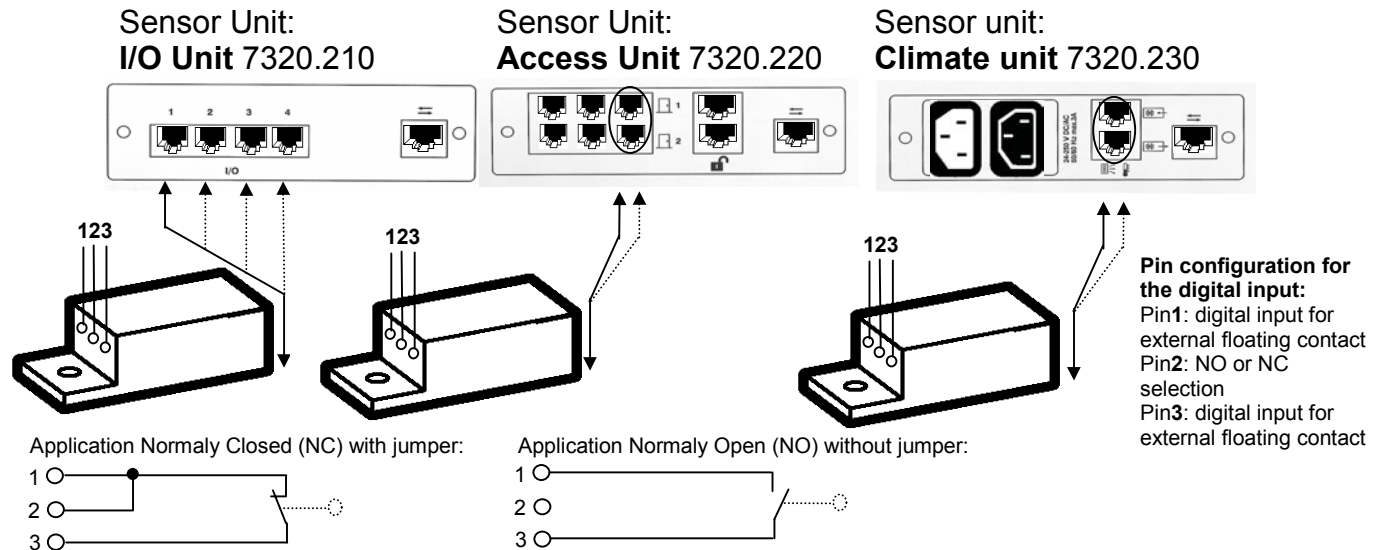

## Description:

The sensor inputs can be connected to the I/O Unit 7320.210 (max. 4 inputs), to the Access Unit 7320.220 (max. 2 units) or to the Climate Unit 7320.230 (max. 2 units). The function of the sensor input is that of a digital alarm message; the function depends on the type of external sensor. The external sensor must have a floating contact. In connection with the access unit, external readers, such as transponders, key-operated switches, etc., can be connected to the input. The condition here again is that a floating contact is available.

The sensor input is assigned a code by which it is automatically identified and set by the CMC TC system. The sensor can be used if the following components are available:

- Processing unit (7320.100) with mains adapter ( e.g., 7320.425 ), national-standard connecting cable, programming cable.
- Sensor unit ( 7320.210, 7320.220 or 7320.230 ), Connecting cable (RJ45, Cat5).

## General conditions of use:

- The operating instructions / safety instructions of the Processing Unit and of the above sensor units apply.
- The maximum cable length between the sensor unit and the sensor input is 2m. The connection must be made with the connecting cable of the supply. Extension cables 7200.450 for special applications are available after consultation with our central office.
- It is absolutely necessary that these cables are installed separately from mains power cables.
- The use of the sensor inputs is exclusively limited to the specified ambient conditions.
- It is forbidden to open the sensor enclosures. They do not contain parts requiring maintenance.
- Before making the connection, check to be sure that the sensor input can be used with the device / module.
- It is forbidden to render safety equipment ineffective.
- Direct contact of the sensor with water (e.g., dew), oil sludge or any aggressive substances is forbidden.
- Use in locations with flammable gas or vapour is forbidden. Protection from water, dust, etc. must be ensured by installation in a cabinet or rack.
- The CMC-TC system must not be live with voltage when the sensor input is being connected to the sensor unit.
- The sensor must be installed properly as described in the separate installation instructions.

## Technical data:

Minimum requirements on external sensor with floating contact: Voltage min. 24 V DC load  
Current: min. 1mA load

Connection: RJ12 socket 6-pole  
Connecting cable: length 2m, RJ12 socket 6/6 both ends  
Temperature range: +5°C to +45°C  
Protection category: IP40

**Address:** Rittal GmbH & Co. KG / Auf dem Stützelberg / D-35745 Herborn / phone: (+49) (2772) 505 – 0 /  
Fax: (+49) (2772) 505 – 2319 / eMail: [Info@rittal.de](mailto:Info@rittal.de) / Internet: <http://www.rittal.de>

