

Leakage sensor


DK 7320.630

Note:

For reasons of clarity of the presentation, these operating instructions do not contain all information details and also cannot cover every possible case of installation, operation or repair. Technical specifications are subject to change without notice. In case of doubt, the German text prevails.

Sensor unit

I/O Unit 7320.210

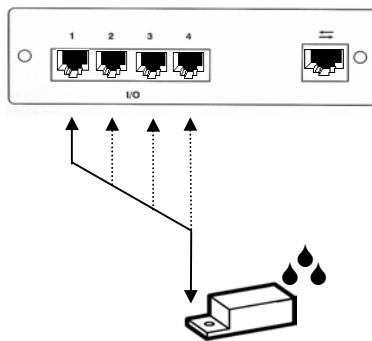

Basic rules for a correct leakage message:

The sensor must be mounted with the sensor head pointing to the bottom.
The distance between the sensor head and the bottom must be 3 mm at least. If water is touching the sensor head an alarm is emitted.

Description:

The sensors can be connected to the I/O Unit 7320.210 (max. 4 sensors). The sensor serves as a leakage monitor. The sensor is assigned a code by which it is automatically identified and set by the CMC TC system. The sensor can be used if the following components are available:

- Processing unit (7320.100) with mains adapter (e.g. 7320.425), national-standard connecting cable, programming cable.
- Sensor unit (7320.210 or 7320.230), Connecting Cable (RJ45, Cat5).

General conditions of use:

- The sensor must only be used together with the Rittal CMC-TC system.
- The operating instructions / safety instructions of the Processing Unit and of the above sensor units apply.
- The maximum cable length between the sensor unit and the sensor is 2m. The connection must be made with the connecting cable of the supply. Extension cables 7200.450 for special applications are available after consultation with our central office.
- It is absolutely necessary that these cables are installed separately from mains power cables.
- The use of the sensors is exclusively limited to the specified ambient conditions.
- It is forbidden to open the sensor enclosures. They do not contain parts requiring maintenance.
- Before making the connection, check to be sure that the sensor can be used with the device / module.
- It is forbidden to render safety equipment ineffective.
- Direct contact of the sensor with water (e.g. dew), oil sludge or any aggressive substances is forbidden. Only the sensor head is an exception and may have contact with water.
- Use in locations with flammable gas or vapour is forbidden. Protection from water, dust, etc. must be ensured by installation in an enclosure or rack.
- The CMC-TC system must not be live with voltage when the sensor is being connected to the sensor unit.
- The sensor must be installed properly as described in the separate installation instructions.
- Extreme mechanical wear must be avoided.

Technical data:

Sensor with an optical sensor head
Connection: RJ12 socket 6-pole
Connecting cable: length 2m, RJ12 plug 6/6 both ends
Temperature range: +5°C to +45°C
Enclosure: IP 40

Address: Rittal GmbH & Co. KG / Auf dem Stützelberg / D-35745 Herborn / phone: (+49) (2772) 505 – 0 /
Fax: (+49) (2772) 505 – 2319 / eMail: info@rittal.de / Internet: <http://www.rittal.de>

