

Smart reader


DK 7320.750

Note:

For reasons of clarity of the presentation, these operating instructions do not contain all information details and also cannot cover every possible case of installation, operation or repair. Technical specifications are subject to change without notice. In case of doubt, the German text prevails.


Sensor unit:

Access Unit 7320.220

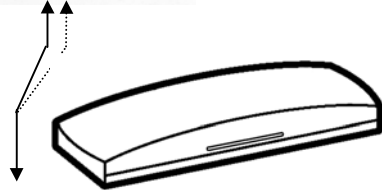

Pin configuration for connecting cable RJ12 plug handle:

Pin1:	free	
Pin2:	free	
Pin3:	free	
Pin4:	free	
Pin5:	Gnd	Reader
Pin6:	+24V	Reader
Pin7:	SDA	Reader
Pin8:	SCL	Reader

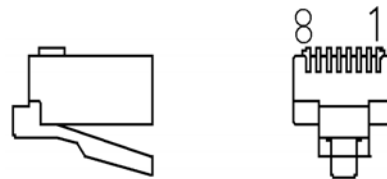

Description:

The readers can be connected to the Access Unit 7320.220 (max. 2). The reader performs the function of a personalised door release. For each reader an interlock system (e.g. electrical handle) and an access sensor must be mounted on the appropriate door. Design adapters can be used for mounting on the Rittal door systems.

Supplied with the reader are 3 chip cards. Each card carries a 4-digit code: 1st card:1001, 2nd card:1002, and 3rd card:1003.

These codes are released in the basic setting in the CMC-TC system but they can be disabled individually. If a card with a released code is pulled through the reader, the door system is released and can be opened. If an invalid code is loaded in the reader, the door system remains locked. In either case the code is communicated to the CMC-TC system. The following should be observed when pushing the card in the card reader: The chip must be in the forward portion and down on the card. Leave the card about 1 second in the reader and then pull it out. The reader is automatically identified and set up by the CMC-TC system. The following components are required for operating the reader:

- Processing unit (7320.100) with mains adapter (e.g., 7320.425), connecting cable complying with local specifications, programming cable.
- Sensor unit (7320.220), connecting lead (RJ45, Cat5).
- Additional holes in the door (see assembly drawing)
- Access sensor (7320.530) and interlocking system / electrical handle system

General conditions of use:

- The reader system must only be used together with the Rittal CMC-TC system.
- The operating instructions / safety instructions of the Processing Unit and of the above sensor units apply.
- The maximum cable length between the sensor unit and the reader system is 3+2m. The connection must be made with the connecting cable of the supply. Extension cables 7200.450 for special applications are available after consultation with our central office.
- It is absolutely necessary that these cables are installed separately from mains power cables.
- The use of the reader system is exclusively limited to the specified ambient conditions
- The enclosure contains no parts that require maintenance. The three DIL switches on the printed-circuit board must always remain at "on" position; this position must not be changed.
- Before making the connection, check to be sure that the reader for the system can be used with the device / module.
- It is forbidden to render safety equipment ineffective.
- Direct contact of the reader system with water (e.g., dew), oil sludge or any aggressive substances is forbidden.
- Use in locations with flammable gas or vapour is forbidden. Protection from water, dust, etc. must be ensured by installation in a enclosure or rack.
- The CMC-TC system must not be live with voltage when the reader is being connected to the sensor unit.
- The reader must be installed properly as described in the separate installation instructions.

Technical data:

Voltage 24 V DC
Current consumption 10mA
Connecting cable: length 3m, RJ45 plug
Extension cable: length 2m, RJ45/RJ45 plug
Extension coupler: RJ45/RJ45 socket

Card type: I²C chip cards with 2kBit memory conf. to DIN EN 27816
Interface: I²C bus
Input waiting time: 60 sec.
Contact made through landing contacts 0
Ambient temperature range: +5°C to +45°C
Protection category: IP20

Address: Rittal GmbH & Co. KG / Auf dem Stützelberg / D-35745 Herborn / Tel: (+49) (2772) 505 – 0 /

Fax: (+49) (2772) 505 – 2319 / eMail: info@rittal.de / Internet: <http://www.rittal.de>

